


# P700 Professional Presenter

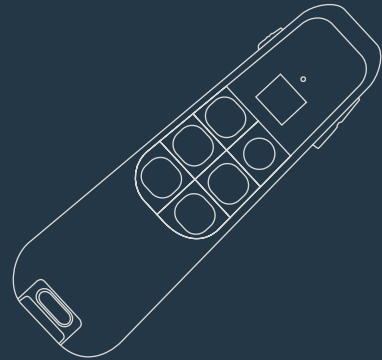

Instruction Manual



## Package contents

- iiglo P700 Professional Presenter
- USB receiver
- Carrying case
- User Manual
- 2 x AAA batteries


## Features

- You're in control: Navigate through your presentation with confidence with the intuitive slideshow controls.
- Long range: Up to 20 meter range enables extraordinary freedom while presenting. Mingle with your audience for greater impact!
- Brilliant red laser pointer: Powerful and easy to see - even in brightly lit rooms.
- LCD display: Keep track of time, battery, and wireless reception with a glance or with silent, vibrating alerts. You remain focused on your presentation, not the clock.

- Intuitive slideshow controls: Buttons are easy to find by touch. And the smooth contours feel great in your hand. You'll be in control from the first slide to the last.
- Plug-and-play wireless receiver: There's no software to install. Just plug the receiver into a USB port to begin. And when the show is over, you can store the receiver in the presenter.


## Install Batteries


Slide to open the battery cover, and insert two AAA batteries in the battery compartment matching the polarity symbols + and -.

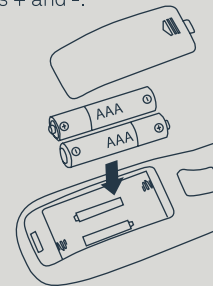

## Notes

- Make sure the ON/OFF switch is at the OFF position before installing or replacing batteries.
- If the battery indicator is not full and the laser indicator flashes under normal operation, replace the batteries.
- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries or rechargeable batteries of different capacities.
- If you do not plan to use the presenter for a long time, please remove the batteries. Batteries can leak chemicals that can damage electronic parts.

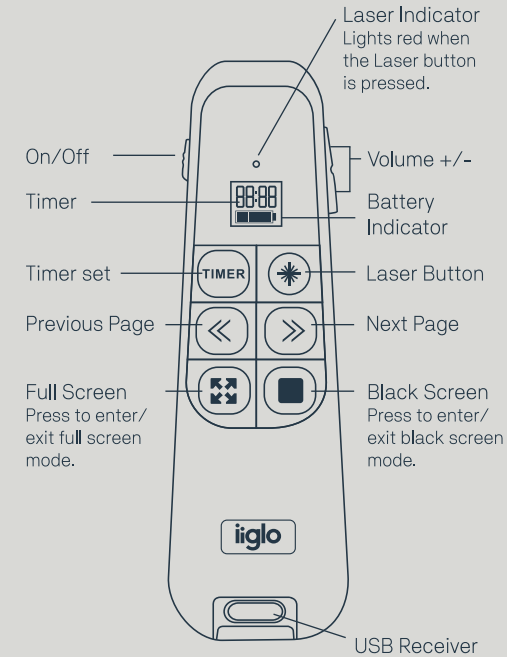

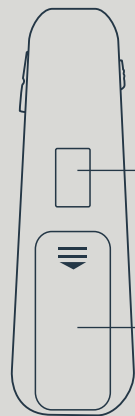

## Backside

Additional laser button  
Press to turn on the laser beam.  
Release to turn off.

Battery compartment

## Note

Laser radiation – Avoid direct eye exposure.

## Connect the receiver



1. Turn on your computer
2. Take out the USB receiver and plug the receiver into your computer's USB port
3. Switch the ON/OFF button to ON. Your presenter and receiver will automatically pair.

Please note: Insert the receiver back into the presenter's slot when not in use.

## Set the timer

1. Press and hold the TIMER SET for 3 seconds until the LCD screen lights blue. The minute digit will flash.
2. Press VOL+ or VOL- to set.

3. Press << or >> to move between the digits.
4. Press TIMER SET to confirm and exit the setting.

Please note: The presenter vibrates to let you know when you have 5 minutes, 1 minute and no time remaining. The LCD screen turns off when you have no time remaining.

## Troubleshooting pairing

- Make sure you have properly installed fresh batteries.
- To pair the presenter and receiver manually:
  - o Place the presenter next to the receiver
  - o Slide the ON/OFF switch to ON
  - o Simultaneously press ESC and VOL+ for 3 seconds until the laser indicator flashes. When pairing is successful, the indicator turns off.
  - o If pairing fails, restart the computer and presenter, then repeat pairing steps.

## Care and maintenance

- Use and store the presenter only in room temperature environments
- Keep the presenter dry
- Keep the presenter away from dust and dirt.
- Handle the presenter carefully: do not disassemble or drop.

Model no: IIPRESENTER01

Please read this user manual  
before using your new presenter.



Imported by iiglo  
Østre Kullerød 4,  
N-3241 Sandefjord  
Norway | [www.iiglo.com](http://www.iiglo.com)  
Made in China

**iiglo®**